


READ ME FIRST!!!

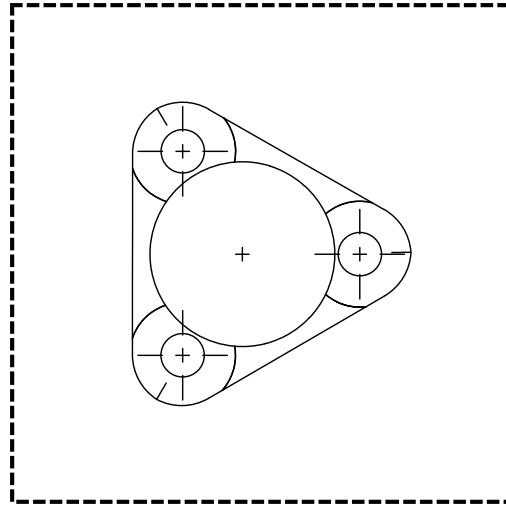

PLEASE NOTE: The included screws and drill template will not be used if you are using this product on a Old Town Sportsman Autopilot 120/136 or 106 MK. For these boats, this product should be installed in place of the stock included clamshells using the stock hardware.

CLAMSHELL INSTALLATION INSTRUCTIONS

1. Locate the position on your kayak where you would like to install the clamshell. The area should be at least 1.5" x 1.5".
2. Cut out the included drill template and place it on the position located earlier.
3. Carefully holding the drill template, drill four small pilot holes on the four outer crosses of the template using a 3/32" drill bit.
4. Determine the size of the wire being inserted into the clamshell.
5. Carefully holding the drill template once more, drill one hole on the center cross using a 7/8" drill bit.
6. Run the wire into the kayak.
7. **USING CARE NOT TO KINK THE WIRE,** carefully insert the wire into the included gasket.
8. Place the gasket flush on the kayak, centering the four screw holes with the four pilot holes drilled earlier.
9. Place the included clamshell on top of the

gasket, ensuring the screw holes of the clamshell line up with the screw holes of the gasket.

10. **USING CARE,** screw the included screws through the clamshell and gasket holes into the pilot holes drilled earlier. **DO NOT OVERTIGHTEN!**

